

Flip click clockTM
a design object tailored to be playful

User Manual



ginkgo
DESIGN - QUALITY - TIME

Please fully charge up the clock first before first time use by using the USB charging lead provided. Please set the clock on Sound Activated display to save the battery life when the clock is not plugged in.

Product Features

- sound activated or permanent LED digital display clock
- flip controlled alarm
- operated by in-built rechargeable battery and USB charging lead included.


Product Set Up & Charging Instruction

1. Please fully charge up the clock first before first time by using the USB charging lead provided.
2. The DC 5V charging point is at the back of the product. You can connect the USB lead to any usb charging port such as a powered-on computer or laptop USB port or any 5V USB phone charger (not included)
3. The charging indication light will be in red when charging and green when fully charged.
4. The clock can be permanently plugged in with the charging adapter.

Product Touch Control Buttons Introduction

(Long touch = 5 seconds; short touch: 0-1 second)


HR/MIN long touch to access to the time setting and quick touch to adjust the hour or minute number.

 long touch to access to the alarm time setting and short touch to confirm and exit the setting.


V/S long touch to change the time format between 12 or 24 format and short touch to change the clock display mode between sound activated display or permanent display.

 long touch to turn the clock on or off.



- Product Power ON/OFF

1. A long touch on the power button  will turn on this product.
2. To turn it off, touch the same button for 5 seconds.

- Time Setting

1. Long touch on the **HR** or **MIN** button for 5 seconds until a beep to access the time setting mode and both hour and minute numbers on the display screen will start flashing.
2. Short touch on **HR / MIN** buttons to adjust the hour or minute number. The number can be automatically scrolled up fast if you leave your finger on the button. Please note that the number can only be scrolled up and can't be scrolled down.
3. After the right hour and minute numbers have been selected, a short touch on the  button to confirm and exit the time setting.

- Alarm Setting

1. Long touch on  button for 5 seconds until a beep to access the alarm setting mode and both hour and minute display numbers on the display screen will start flashing.
2. Use the same way as above to adjust the alarm hour and minute and short touch on  button to confirm and exit the alarm setting mode.

- Sound Activated or Permanent Display setting

The LED clock display can be set on sound activated display or permanent display. When in sound activated display, the LED display will automatically switch off when the room is quiet and light up again when you touch it, tap the table, click your fingers or clap your hands. When in permanent display, the LED display lights up constantly without going off, but the battery would run out within 2 weeks time.

1. short touch on **V/S** button when clock in time display mode, the clock will either display **on:Sd** or **- - Sd**.
on:Sd: stands for sound activated display
- - Sd: stands for permanent display.
2. Choose the right display mode you prefer

- 12H or 24H time display format setting

1. when the clock in time display mode, a long touch on **V/S** button for 5 seconds until a beep, the time format will be changed between 12H or 24H format.
2. When the clock is in 12H display format, there will be a dot displaying on the left top of the time screen when it's PM time.

Snooze Operation

1. To snooze when the alarm goes off, simply touch any of these touch buttons.
2. To stop the snooze, simply flip over the clock and the alarm will be turned off.
3. To turn on the alarm for next day, you will need to flip the clock over (when the alarm icon is top)

Flip Function Instruction

1. This product can be flipped over to turn on or turn off the alarm.
2. When the alarm icon is on top of the product, it means alarm is turned on; there is also a dot display under the right bottom of the time display screen to indicate this. When the Gingko logo is on top, it means alarm is turned off.
3. You can only do the setting when the alarm icon is on top because all the touch buttons will be deactivated if the alarm icon is under the bottom.

Product Care Notice & Warranty

1. This product is made of wood, please don't place it in a very humid room such as steaming room, humid bath room etc.
2. Please avoid direct sunshine on the product.
3. A heavy drop or a drop from a high table or shelf may damage the product surface etc, please place it at a safe place.
4. Please do not use any charging adapter to charge the product if its output is more than 6V.
5. A natural dark wood grain on the product surface is normal, not a product fault.
6. Do not disassemble this product without manufacturer's authorization as this could seriously damage the product and invalidate your manufacturer warranty.
7. Any damage caused by operating/user errors may not be covered the manufacturer's warranty.
8. This product comes with a standard one year manufacturer's warranty from date of purchase.

Flip click clockTM

a design object tailored to be playful

www.ging-ko.co.uk
Copyright © Gingko Electronics Ltd

All rights are registered and protected
Alle Rechte sind eingetragen und geschützt
Todos los derechos están registrados y protegidos

support@ging-ko.co.uk
Printed in China

